



EXAMPLE BIG LUG INSTALLATION

CHECK INSTALLATION STEPS:

- 1. SLIDE IN YOUR HANDRAIL BOLTS AND LEG BOLTS INTO THE CHANNEL SLOTS. SLIDE THE HANDRAIL BOLTS APPROXIMATELY 12" FROM EACH END. NOTE: BE SURE TO SLIDE IN YOUR HANDRAIL BOLTS BEFORE PUTTING ON THE LEGS
- 2. AFTER THE BOLTS ARE IN PLACE, THEN ATTACH THE HANDRAIL AND LEG TO THE BOLTS AND SECURE AS SHOWN IN FIG:1 AND FIG:2. USE 3/8" 16-2 1/4" CARRIAGE BOLT AND FLANGE NUT FOR HANDRAILS AND 3/8" 16-1" CARRIAGE BOLT AND FLANGE NUT FOR LEGS.
- 3. SLIDE TRANSITION TREAD FROM ONE SIDE TO THE NEXT AS SHOWN IN FIG: 3
- 4. PUT IN THE ROUND BLACK CAPS AT THE END OF THE HANDRAILS AS SHOWN IN FIG:4. USE A RUBBER Mallet FOR EASIER INSTALL.
- 5. CHECK ALL BOLTS AND SREWS. MAKE SURE EVERYTHING IS SNUG AND SECURE. TIGHTEN AS NEEDED. INSTALL TRANSITION PLATE USING 4-#14X1" TEK SCREWS AS SHOWN IN FIG:5 (ONLY IF NEEDED)

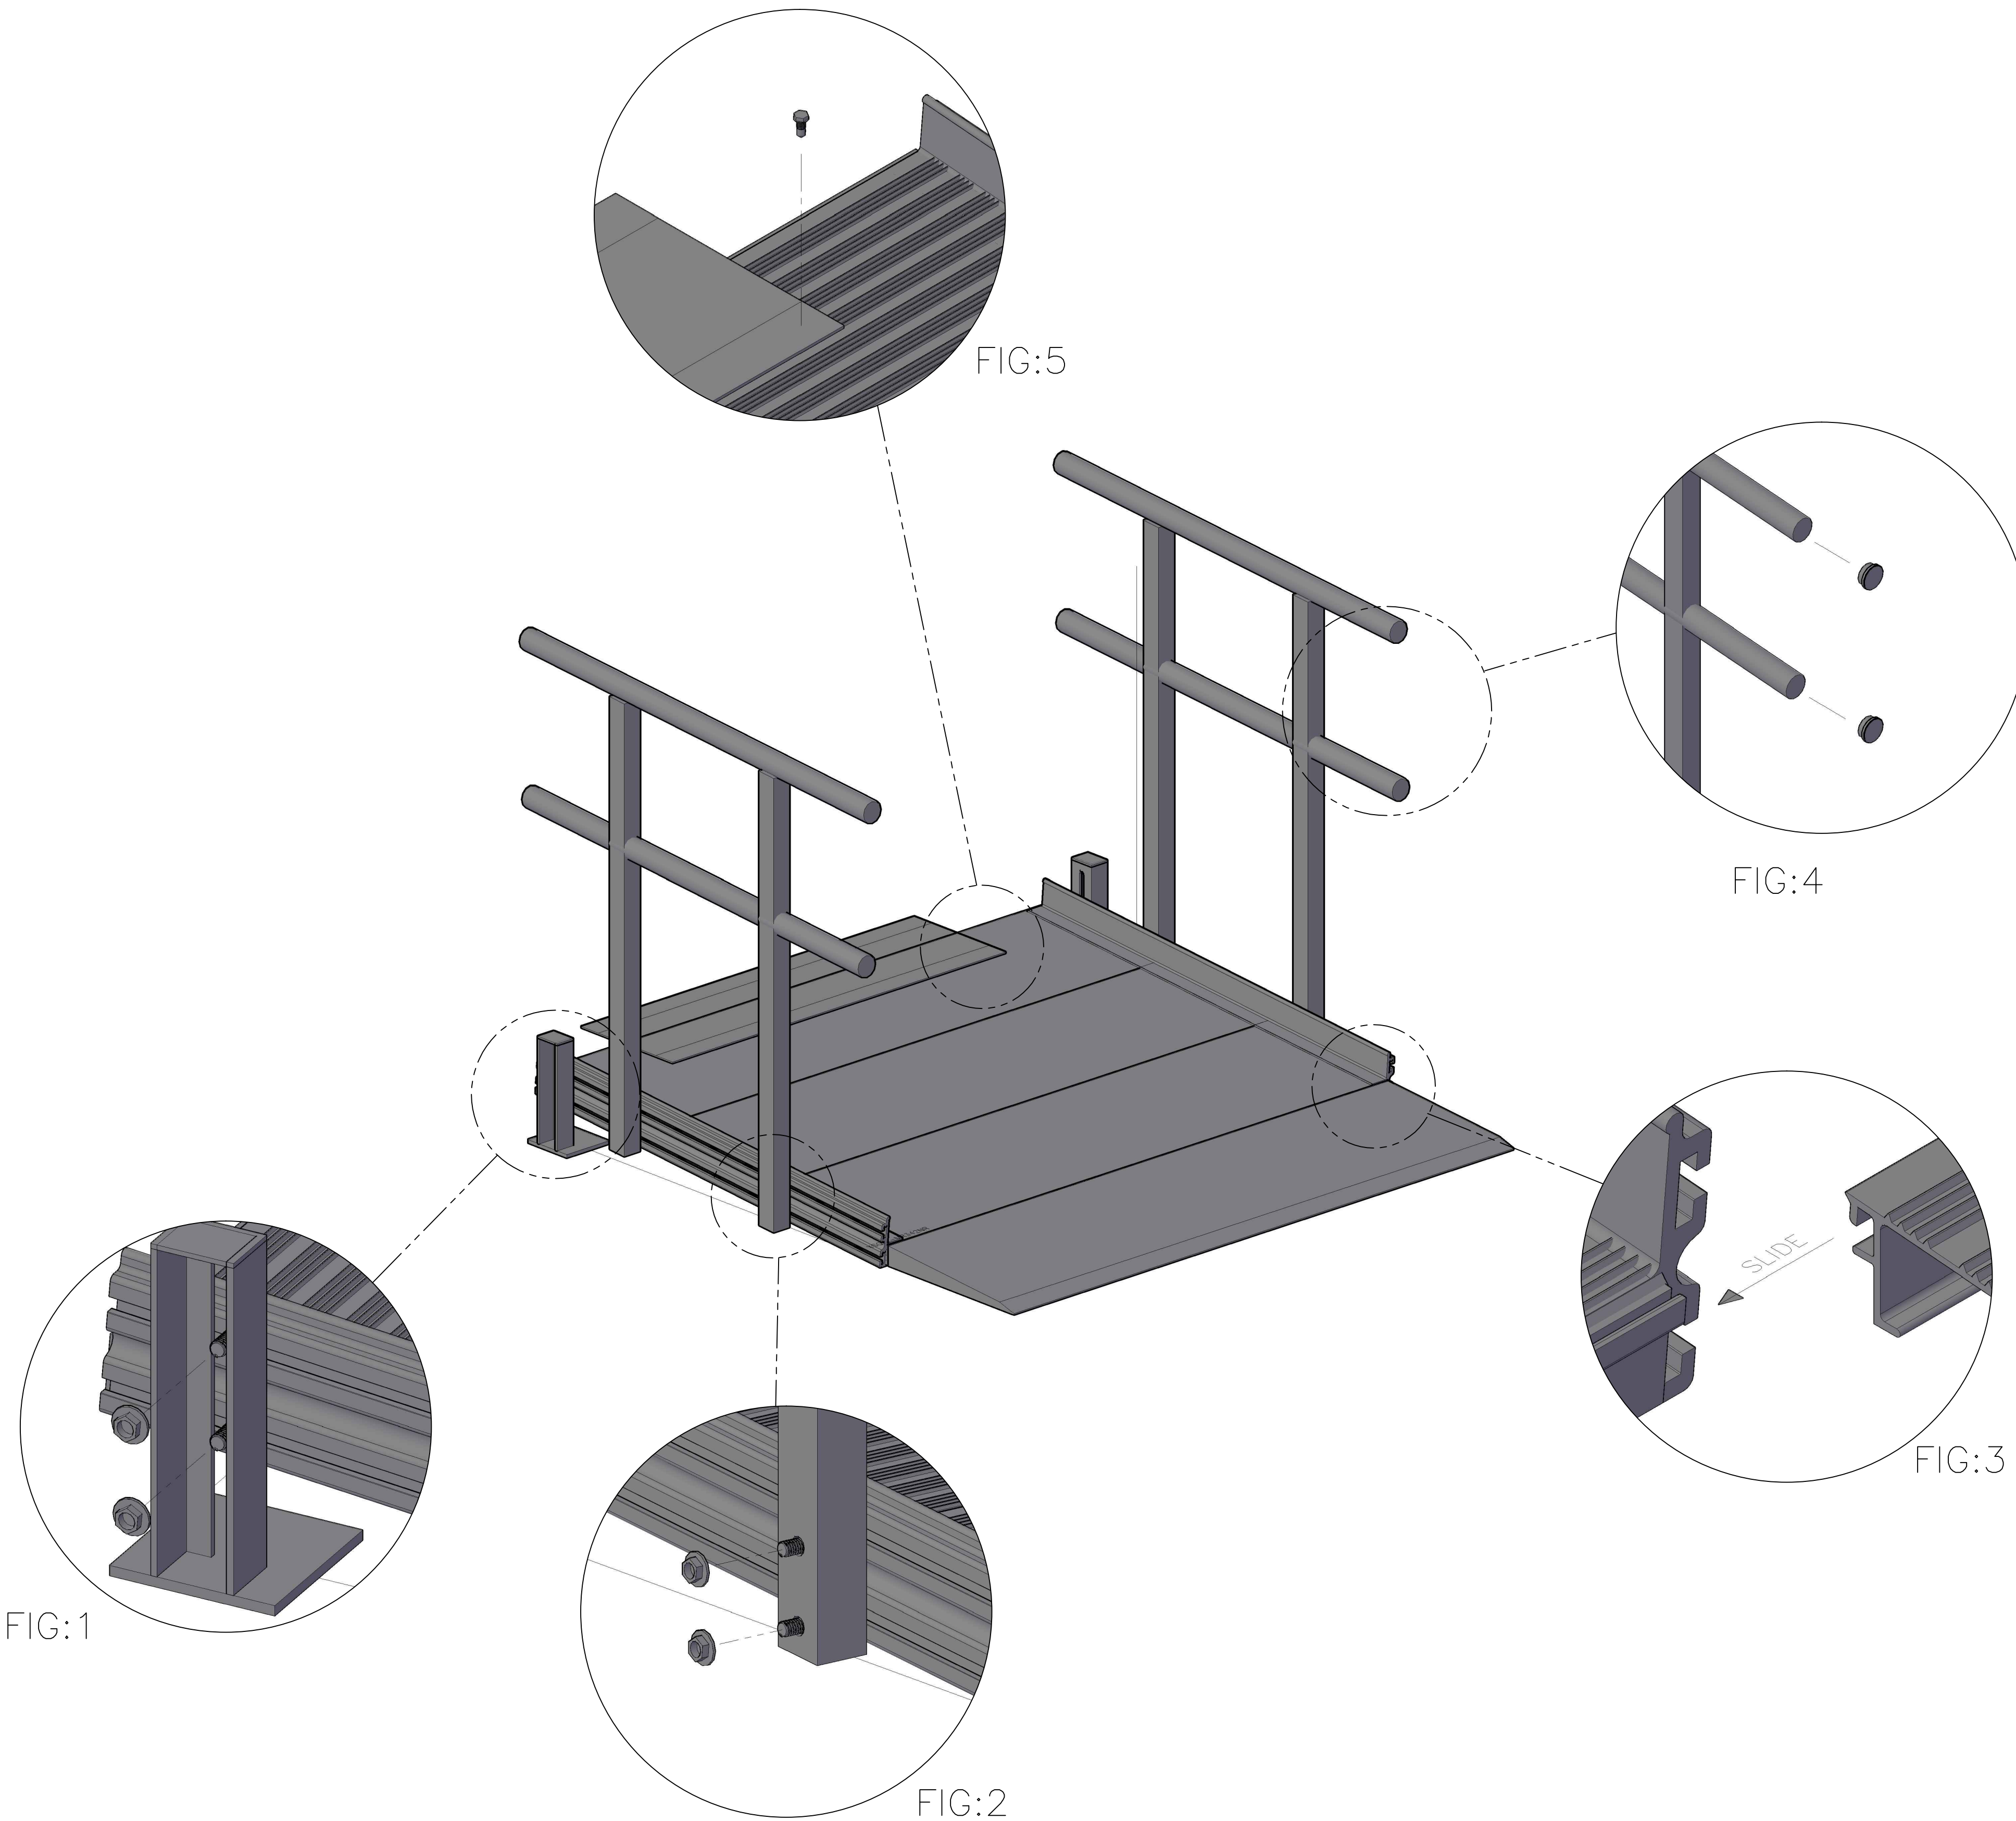

REVISIONS	BY

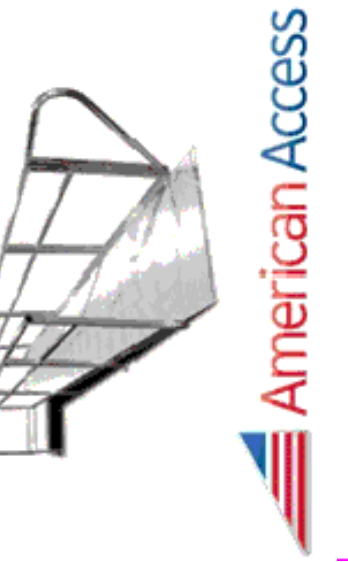

AMERICAN ACCESS INC.
 3150 STAGE POST DRIVE, SUITE 101
 BARTLETT, TN 38133
 888-790-9269 TOLL FREE
 866-734-7267 FAX
 WWW.AARAMPS.COM

BIG LUG INSTALLATION

DRAWN
MP

CHECKED
TC

DATE
7.25.2016

SCALE

JOB NO.

1

7/25/2016 10:30 AM B:\CAD\CAD\ESTIMATOR DRAWINGS\BIG LUG INSTALLATION.dwg